

14" Notebook

MODEL: USFNWXM14BLK

32GB
STORAGE

2GB
RAM



Quick Start Guide



Contents

I .Precautions before Use	2
II .Key Layout and Definitions	3
III .Descriptions of Keys	4
IV .Introduction to Desktop	
1.Windows 10 Start Screen	5
2.Apps introduction	5
3.Start menu	8
4.Multitasking operating interface	9
V .Basic Operations	
1. Sleep, Restart, and Shutdown.....	10

Introduction

Thank you for your choosing the new Tablet PC.

This guide serves to enable users to get to know and familiar with our product as soon as possible. Here we have made a brief introduction to the key layout and definitions in figures and words.

I . Precautions before Use

This production is suitable for use in non-tropic areas below 2,000 meters, and the mark in the nameplate indicates the product is suitable for use in non-tropic areas.

2. Prevent the Tablet PC from falling to the ground or being strongly impacted otherwise.

3. Do not use it in the long term in any environment where the air is too cold, too hot ($<35^{\circ}\text{C}$), too humid or with too much dust. Do not expose the Tablet PC to sunlight.

4. Avoid using it in the strong magnetic and strong static environment as much as possible.

5. Once any water or other liquid splashes onto the Tablet PC, close it immediately and do not use it until it dries out.

6. Do not clean the Tablet PC with any detergent containing chemical element or other liquid to avoid causing damage due to corrosion and becoming damp. If cleaning is really necessary, clean it with dry soft cloth tissue paper.

7. Our company shall not bear any and all responsibilities for loss or deletion of material inside the machine caused due to abnormal software and hardware operation, maintenance or any other accident.

 
8. Please back up your important material at any time to avoid loss.

 
 
9. Please do not disassemble the Tablet PC by yourself; otherwise you will lose the right to warranty.

10. This product supports the overwhelming majority of mainstream brands of 3G DONGLE network cards. The cases for 3G Dongle may be different. It is suggested that you test it to make sure it is OK before buying it.

11. Replacement with incorrect type batteries may cause explosion. Make sure to use original batteries.


II .Key Layout and Definitions

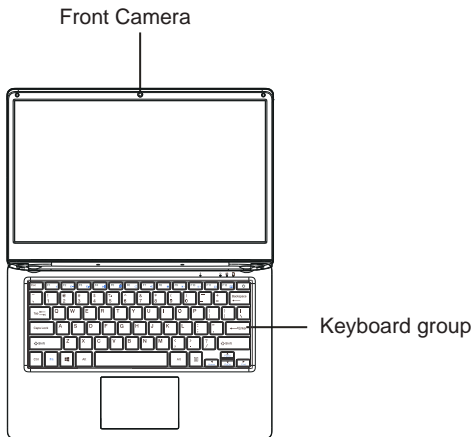

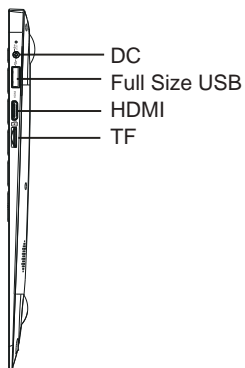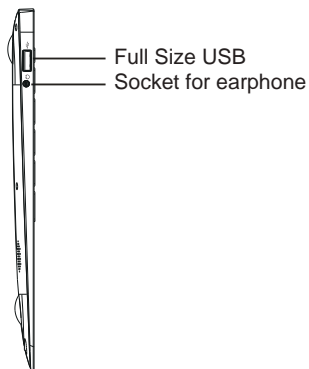

III . Descriptions of Keys

 Attention: Keyboard is optional, and configure the product according to the specific type of the tablet PC you have bought.

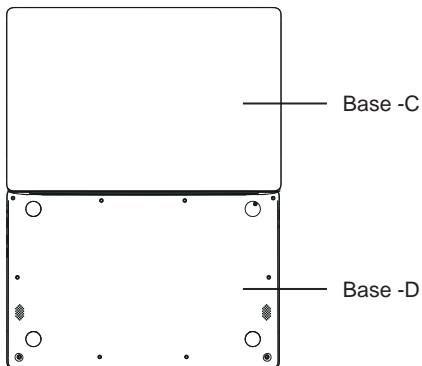



If you want to fix more application programs on the start interface or taskbar, see the operation in the figure below, (1) Click the properties icon(2) Right-Clicking the application (3) Click the Pin to start or pin to taskbar, as follow:



Conversely, if you want to cancel or delete a certain application in the start screen or taskbar, (1) Right-Clicking the application, (2)Click the “Unpin from Start” or “Unpin this program from taskbar”





3. Start Menu

Under PC mode, press Start icon, Start Menu will display, including: Start, Device, Setup, Share, and Search Program.



Usually: File Explorer, Settings, Power, and All apps

Can Sleep/Shut down/
Restart the Tablet PC



Can let you set up
the Table PC.



Can scan more apps



Can let you search
the files and application
programs in the Tablet PC.



Action Center



 
Search menu



Action Center is a notification center also allows for quick settings like Tablet / PC mode, Wi-Fi, Bluetooth etc.

4. Multitasking operating interface

If you Click the Task View, the running applications will be display. We can enter the application, also can be deleted.

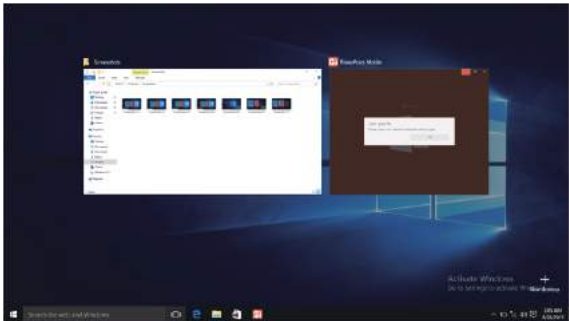

V. Basic Operations

1. Sleep, Shut down and Restart

